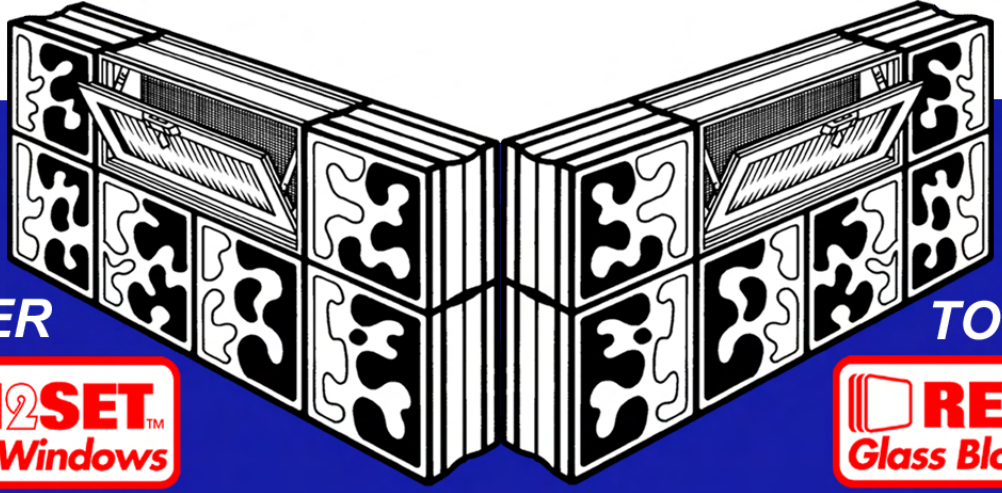

EASY TO ORDER

REDI2SET™ Glass Block Windows

If your window size is not in stock, ordering a special order size is easy.

First determine if you want a vented or non-vented window and if a dryer vent is required.

Next, follow the directions on the other side for measuring, then find your window size on the price chart (remember to leave space around the perimeter for mortar). Vented windows are on one side of the chart, non-vented on the other side.

When placing your order, please use the item number to prevent errors.

A sales associate can assist you with the price chart and show you a diagram of your window, detailing the sizes of the blocks and where the vent will be positioned, and can help you place your order.

- ☑ ***Quality Guaranteed***
  1 Year limited warranty against manufacturing defects
- ☑ ***Thick, Break-Resistant Glass***
  Enhances home security
- ☑ ***Thermal Efficiency***
  Reduces energy costs and helps keep homes comfortable
- ☑ ***Privacy With Natural Light***
  Brightens rooms and eliminates the need for curtains
- ☑ ***Efficient Sound Barrier***
  Reduces noise from outside and helps keep homes quiet
- ☑ ***Versatile Window Solution***
  The ideal basement replacement window. Great for bathrooms, kitchens, garages, door sidelights.

RGF INDUSTRIES, INC. LIMITED WARRANTY

OUR LEVEL OF COMMITMENT

RGF Industries, Inc. is dedicated to the highest standards of quality. This Warranty is provided to increase your satisfaction with our products. If your RGF Industries, Inc. product is within the warranty period set forth below, we will povide the warranted remedy at no cost to you. If beyond the Warranty, we will provide repairs or replacements at a reasonable charge, if you so desire.

SPECIFIC WARRANTY COVERAGE

ONE (1) YEAR LIMITED WARRANTY

The REDI2SET Glass Block Window is warranted to be free from manufacturing defects for one (1) year from the date of purchase. RGF Industries, Inc. will at its discretion, repair or replace any window, or refund your original purchase price.

GENERAL CONDITIONS AND EXCLUSIONS

The limited warranties set forth in this document are the only expressed warranties (whether written or oral) applicable to REDI2SET Glass Block Windows, and no one is authorized to change these written warranties. ALL IMPLIED WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE EXPIRE WITH THE 1 YEAR LIMITED WARRANTY TERMS. RGF INDUSTRIES, INC. IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, AND OUR LIABILITY SHALL IN ALL INSTANCES BE LIMITED TO THOSE SET FORTH IN THE SPECIFIC WARRANTY.

This Warranty is solely for the purchaser of our window and may not be sold, assigned or transferred.

CONDITIONS NOT COVERED

Some items are not covered by this Warranty such as: damage caused by improper installation, use or maintenance; accidents; natural disasters; damage caused by painting or staining; minor scratches or other imperfections in the glass that do not impair structural integrety or significantly obscure normal vision; and damage to surfaces caused by pollutants such as salt or acid rain.

TO GET HELP

To make inquiries about our Warranty, contact either the retailer who provided you our window or us directly at RGF Industries, Inc., 2100 Babcock Blvd, Pittsburgh PA 15209. RGF Industries Inc. will investigate your claim and within sixty (60) days after notification take appropriate action. RGF Industries, Inc. may charge an inspection fee for any on-site inspection that is required or is requested by you. If it is determined that our product has a defect covered by this Warranty, our inspection fee will not be charged.

EASY TO INSTALL

REDI2SET™ Glass Block Windows

To make sure your new window will fit properly, measure the window opening as if the frame were already removed. You will need a space of approximately 1/4" to 1"all the way around the perimeter for mortar.

Remove the window sash and then remove the window frame by bending the top and bottom in toward the center or by cutting it. Remove the old mortar sill if necessary.

Set the new window into place on top of 2 wedges, check that it is plum and level, then secure it with 2 wedges at the top. If you are installing a vented window, the vent latch should be located on the inside at the top.

Mix the mortar according to the instructions on the bag. Apply the mortar around the perimeter using a grout bag or a trowel. Make sure the joints are completely full.

When the mortar begins to set, remove the wedges, fill the holes, smooth the joints with a trowel and clean the glass with a cloth.

When installing into wood frames wall ties should be nailed into the frame prior to setting the window to give the mortar a better grip. Tool the mortar back approximately 1/4" from the outside face of the glass block, then apply caulking between the glass block and the wood frame.

These are general instructions, due to variations in window construction your installation may differ.

Suggested Tools & Materials List

Safety Goggles	Level
Work Gloves	Pre-Mixed Mortar
Tape Measure	Clean Water
Hammer	Trowel
Pry Bar	Bucket
Stiff Brush	Grout Bag
Wood Wedges	Clean Cloth